

ASSEMBLY INSTRUCTIONS FOR YOUR

Jonathan Adler CAPRI 3-LIGHT PENDANT

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- * **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- * If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove mounting plate (B) from canopy (D) by removing canopy screws (E). Set canopy screws (E) aside.
4. Carefully pull wires from the ceiling outlet box and thread them through the center hole in mounting plate (B).
5. Affix mounting plate (B) to ceiling outlet box with mounting screws (C) provided.
6. Determine how far each shade will hang below the wooden bracket (G)
NOTE: each cord (F) is 12 feet long.
7. Guide each cord through the holes in the wooden bracket (G), as shown in ILLUSTRATION A, until the desired drop for each shade is reached.
8. Measure the desired drop for the fixture to hang. Slide the canopy towards the wooden bracket until desired drop is reached. Slide the cord stops (K) down the excess cord and into the canopy to secure the position of the drop.
NOTE: At this point, it is a good idea to hold the fixture up to the ceiling to make sure that the drop is as desired. When checking the drop, take into account that once attached, the bottom of the glass shades will hang below the sockets.
9. Once the configuration is confirmed, it may be necessary to cut excess cord above the canopy. When cutting the cord, be sure to leave 5 or 6 inches of length for wire connections.
10. Lift fixture to ceiling. Make proper electrical connections described in steps 11 - 13. A LICENSED ELECTRICIAN IS RECOMMENDED.
11. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
12. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
13. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
14. Carefully push wire connections back into ceiling outlet box.
15. Place canopy (D) over mounting plate (B). Thread canopy screws (E) into holes in canopy (D), and mounting plate (B) to secure fixture to ceiling.
16. Install three 100W max Type A, medium base bulbs into the sockets.
17. Unthread three set screws (I) from shade housing (H).
18. Lift shade (J) up to shade housing (H). To secure the shade to the housing, thread set screws (I) all the way through holes in shade (J), and into shade housing (H). Turn set screws until hand tight.
19. Repeat steps 17 and 18 for remaining shades.
20. Reconnect main electrical supply from the fuse box/ circuit breaker and test the fixture.

To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.

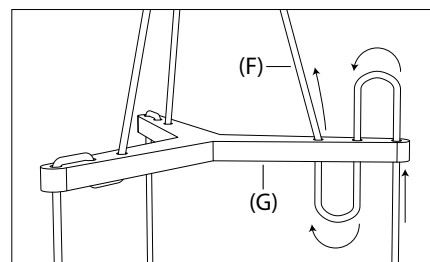
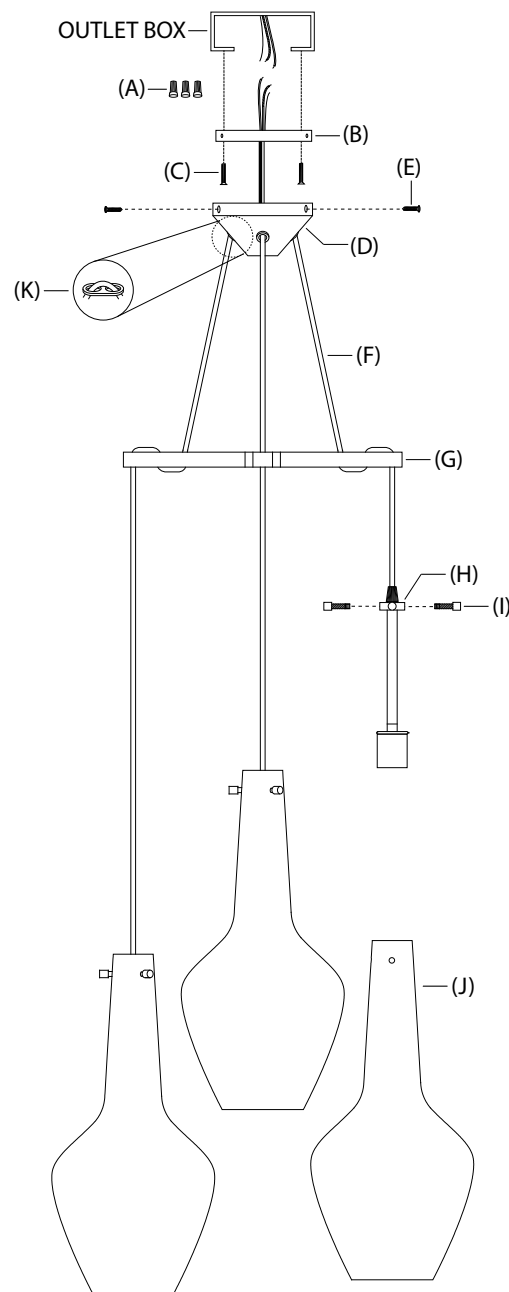


ILLUSTRATION A